



N4A18 Connection Details

Rear Connection Terminal Blocks associated with the N4A18

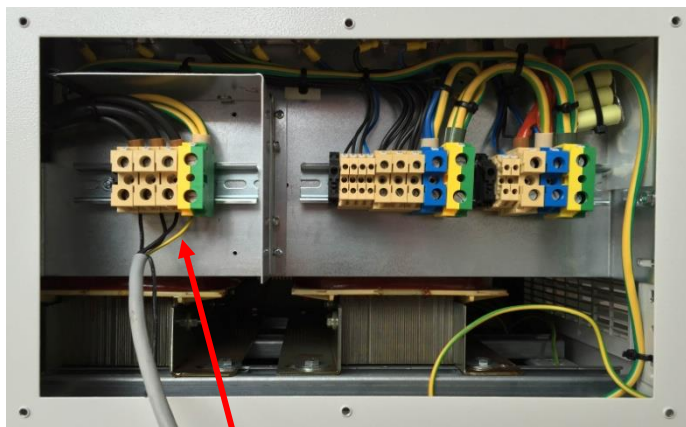


1,2,3,4 3 phase input and earth

5,6,7,8 Three phase and Neutral sense terminals

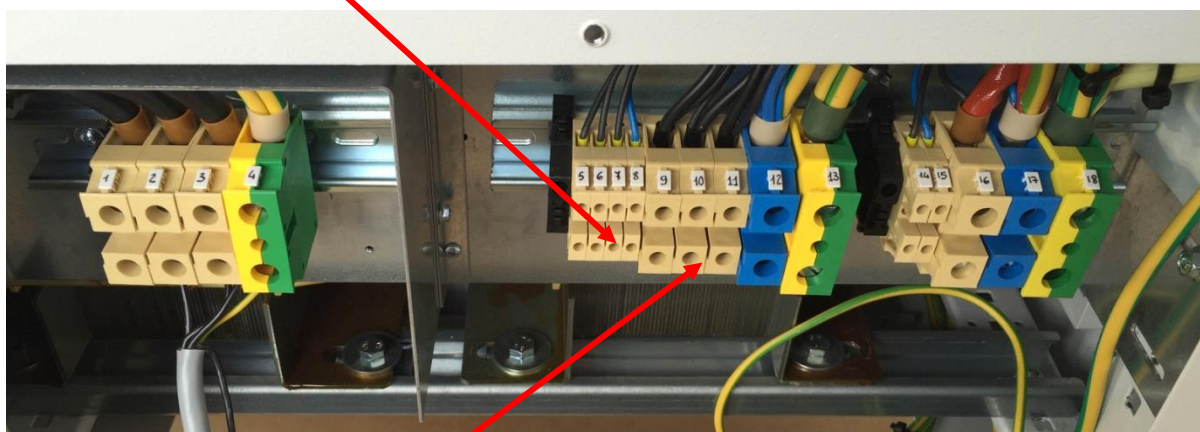

9, 10,11,12,13 Three phase and Neutral / Earth output terminals

14, 15 Single phase (parallel) sense terminals

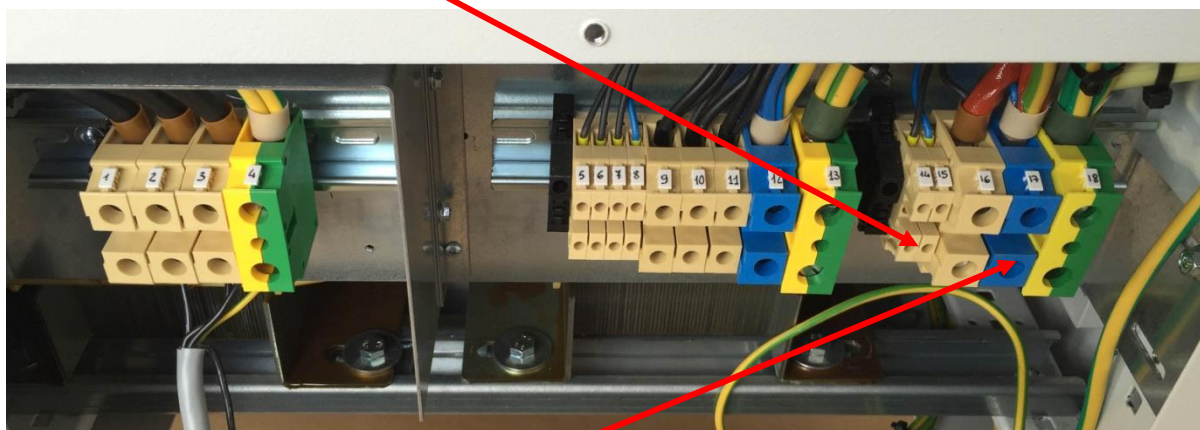

16, 17, 18 Single phase high current (parallel) output with Low / Earth