



Single Phase

Optimum for less than 1 Arms load

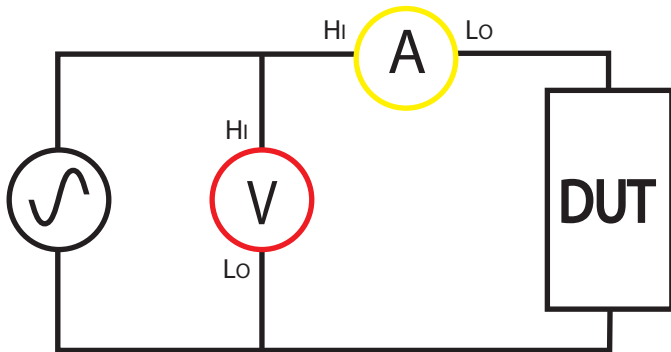


Optimum for more than 1 Arms load

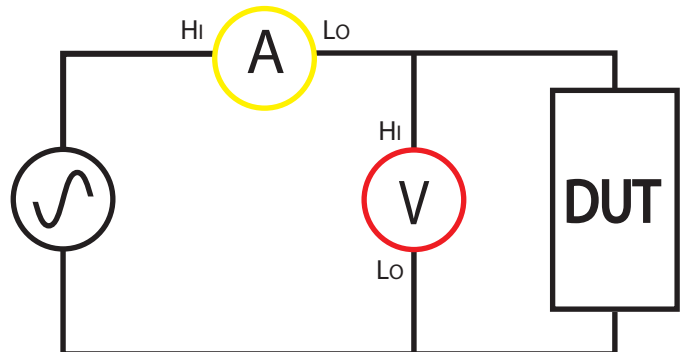


Three Phase Schematics


Three Phase Delta 3P2W

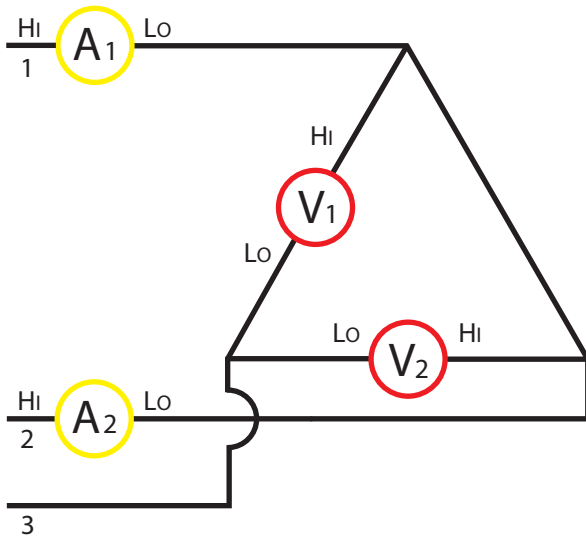

Three Phase Delta 3P3W

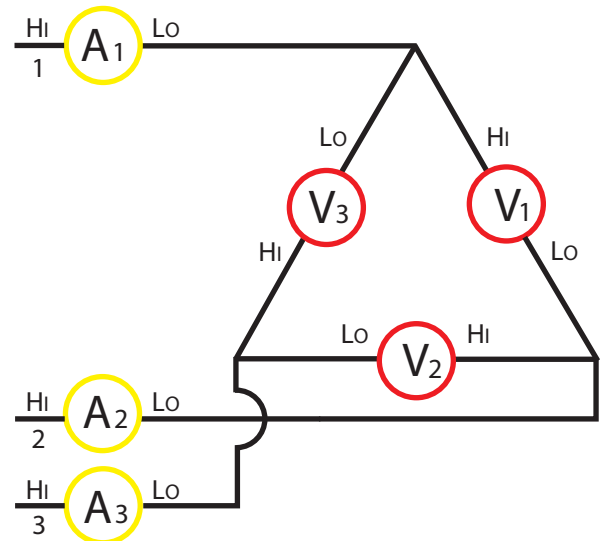


Three Phase Star 3P3W

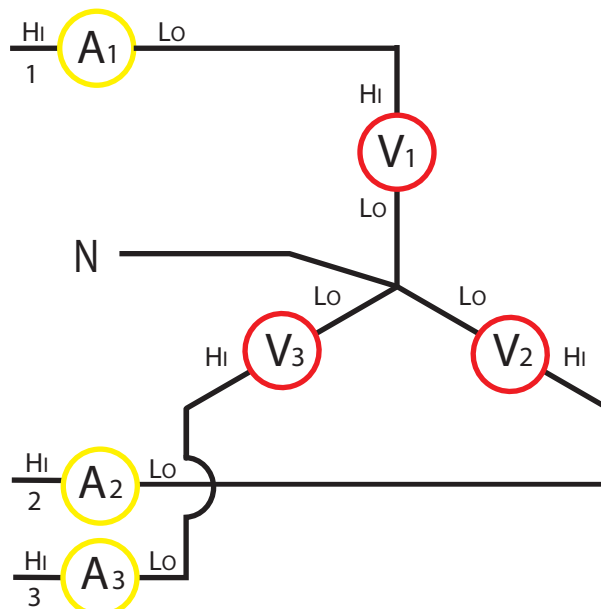


Best practice physical connection diagrams

When using direct current connections, voltage connections can be made using links on the PPA back panel as shown. The diagrams below illustrate both Delta and Star connection.


3P3W Star Connection on PPA4530 or PPA5530

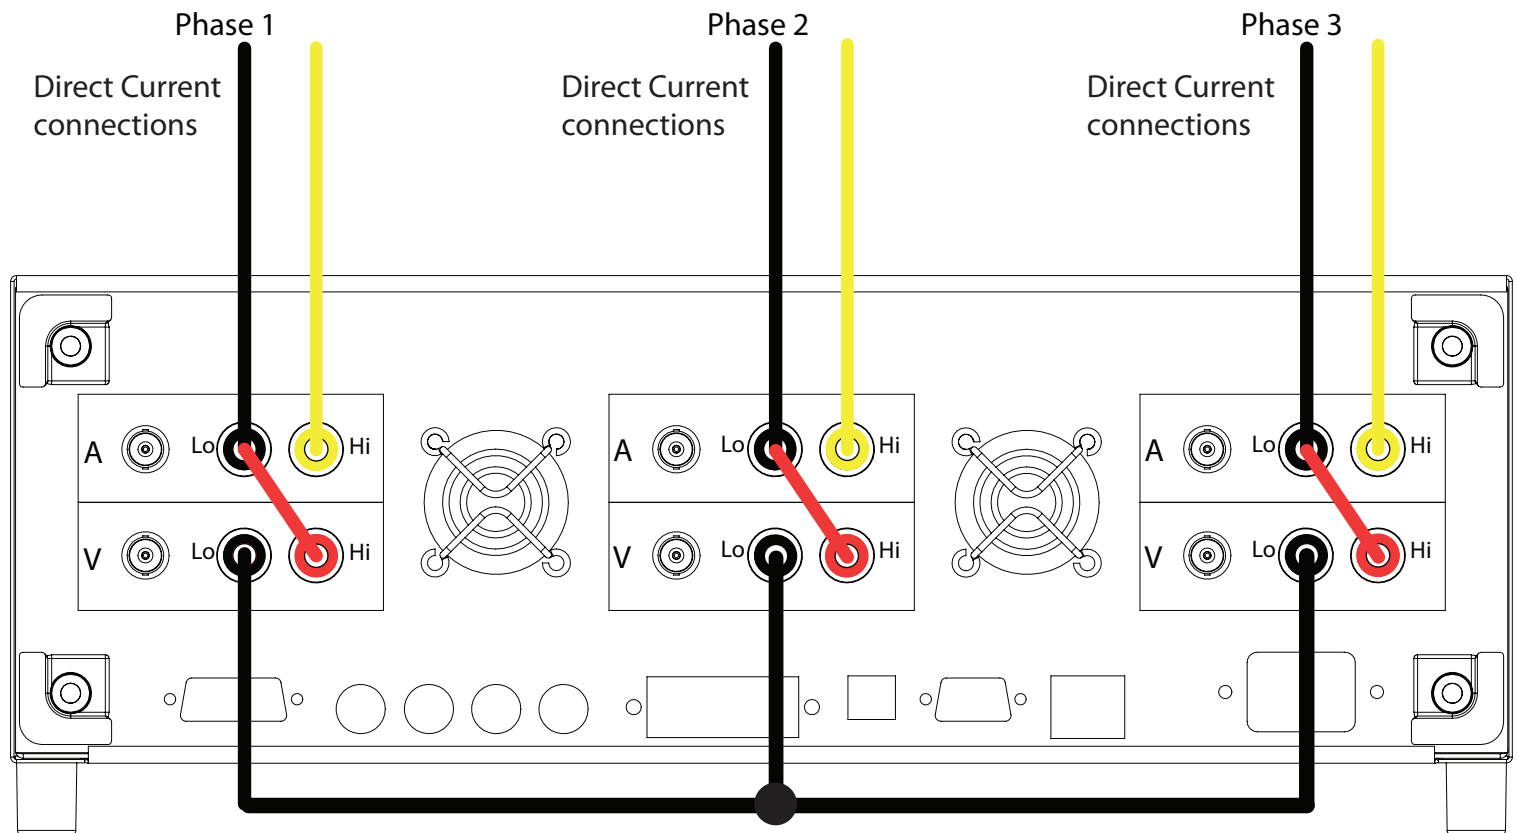


3P3W Delta Connection on PPA4530 or PPA5530

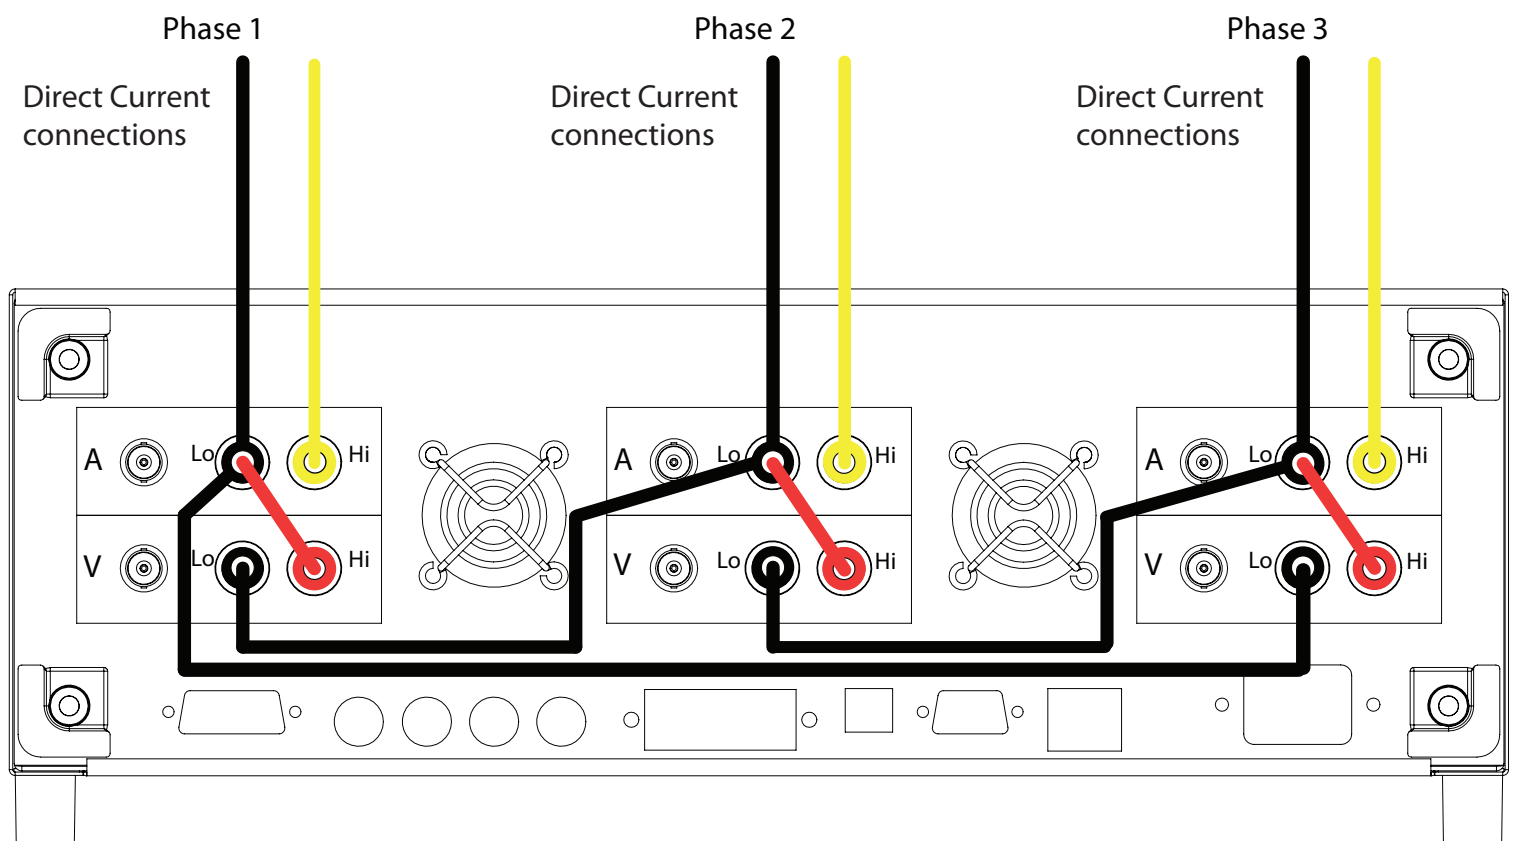


3P3W Star Connection on PPA500/1500 or PPA3500

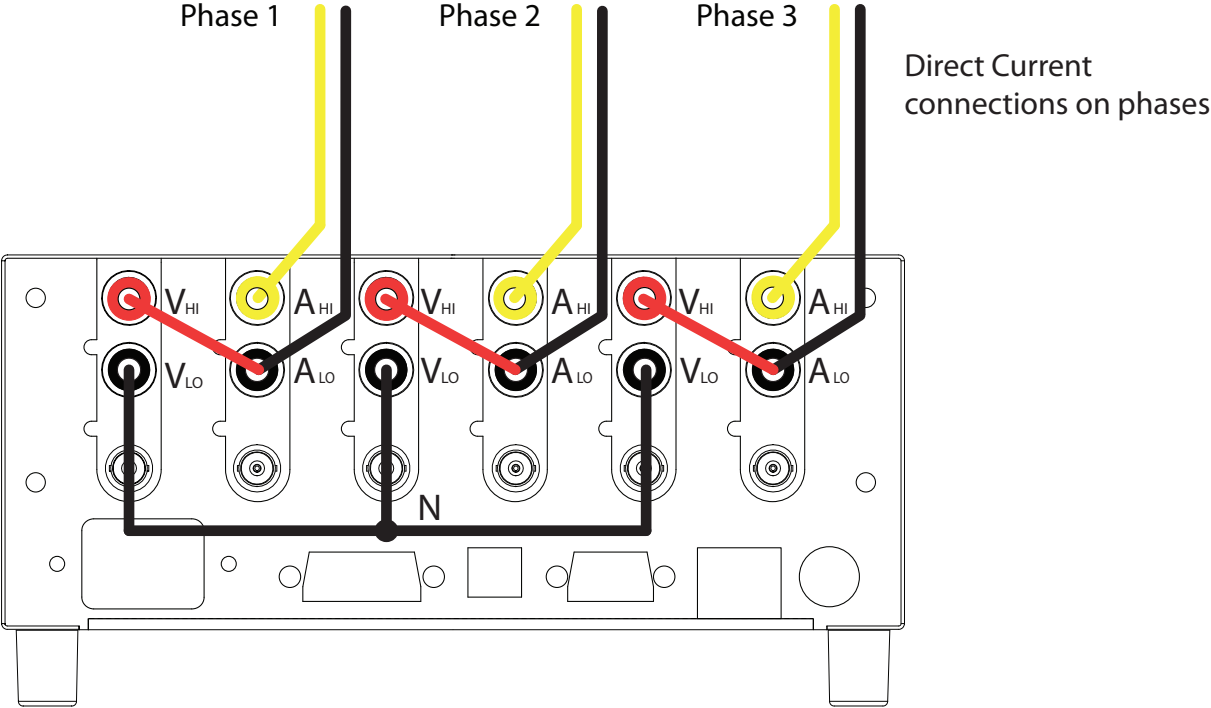

3P3W Delta Connection on PPA500/1500 or PPA3500

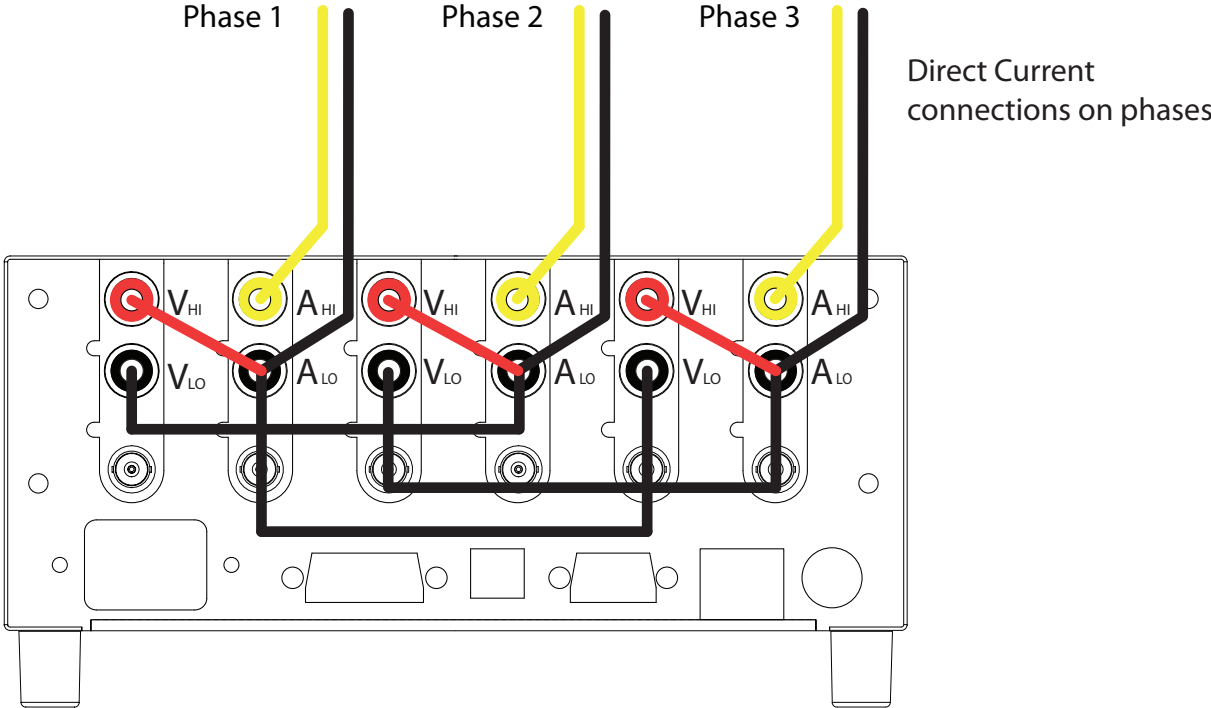

3P2W Delta Connection on PPA4530 or PPA5530

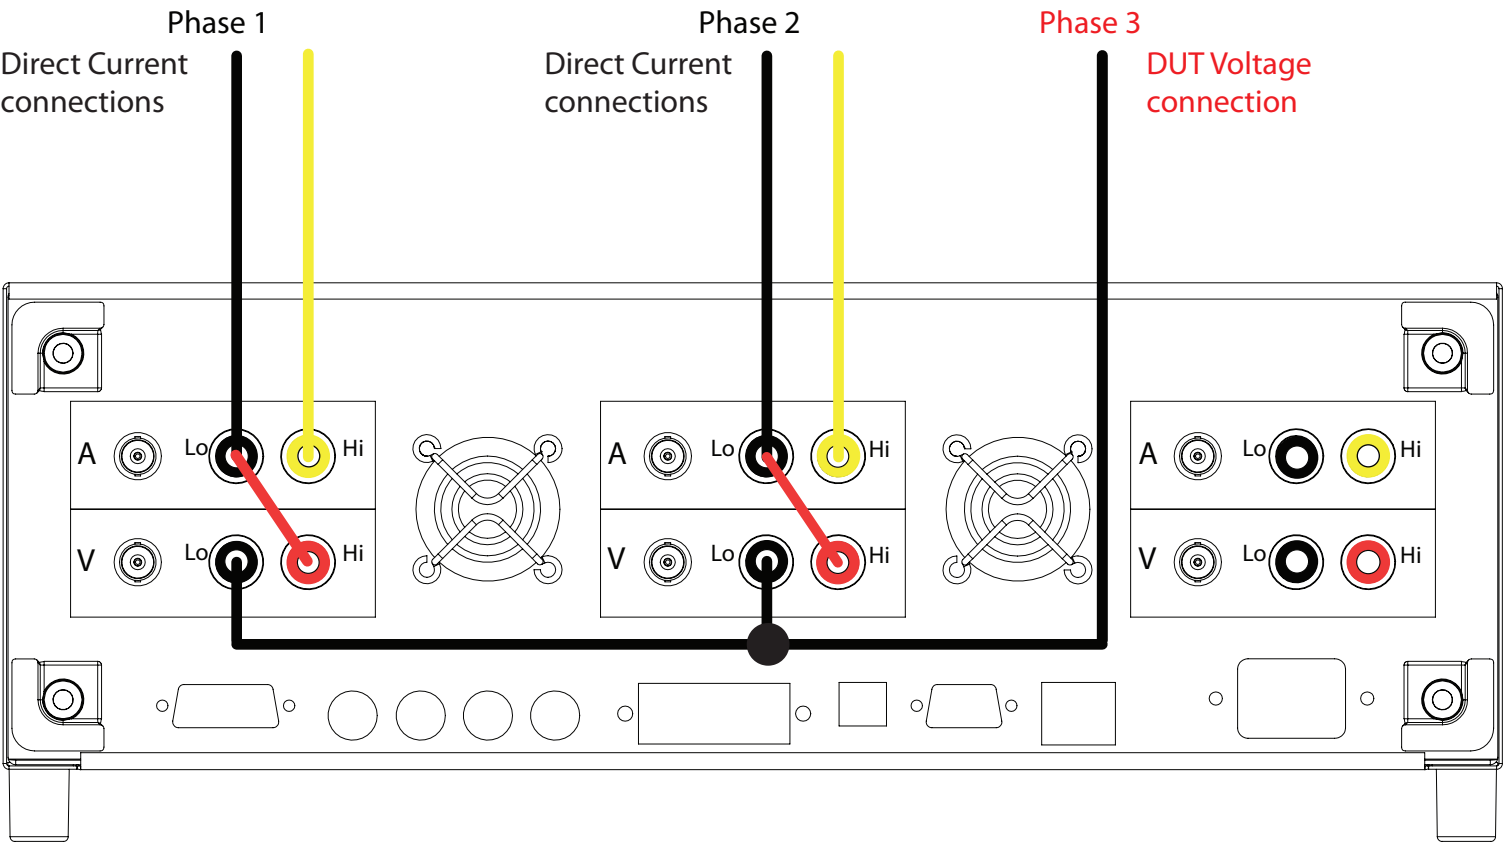

3P2W Delta Connection on PPA500/1500 or PPA3500

